

Instructions for replacing cones and cables

HEN0020 & HEN0040

Note: Two people will be required for this operation.

- Using toggle bar or screwdriver in plug A, rotate shaft to ease spring pressure.
- Insert crook pin into right head bracket (1) and secure door within opening.
- Remove side jamb channels (2) and head bracket bolts (3).
- Remove door arms (4) from head bracket and door by withdrawing split pins (5).
- Detach free crimped end of cable (6) from roller spindle clip (8).
- Remove and discard cables and cones by driving hollow pin (7) from cone and shaft, using hammer.
- Replace cones making sure you have the cone marked "L" on the Left and "R" on the right
- Ensure that cones are correctly fitted by checking the cable fixing points on the cones are aligned with each other.
- Fix cones using hollow pins and hammer.
- Refit the spring assembly and head brackets then replace door arm jamb channels by reassembling in reverse order.
- Refit new cable by clipping into cone and roller spindle clips (8)
- Ease spring pressure using toggle bar and remove crook pin
- Allow spring to take up slack, ensuring that cables are in the outer groove, run down behind the cone and that roller spindle clips (8) are in position, as shown.

